

ALPHABETICAL INDEX

- A** Actuating Lever 16E
 Air Bar 2G
 Air Bar Clamping Lever 3G
 Air Bar Clamping Lever Connecting Rod 4G
 Air Bar Shaft 5G
 Air Blower Attachment 85CU
 Air Cock 2H
 Air Compressors (Plates 30-32) 75A
 Air Cylinder 1CK101
 Air Filter 1B, 2B,
 Air Flange 1C, 2C,
 Air Pin 1D, 2D
 Air Pin Block, front 3B, 3C,
 Air Pin Plate, front 3D
 Air Pipe Mathematical Attachment 4B, 4C
 Air Pipe 293E
 Air Pipe Connection Block 209E
 Air Pipe Cover 214E,
 Air Tower 218E,
 Air Tower Cam 305E
 Air Tower Cam Lever 6G, 1H
 Air Tower Housing 215E
 Air Tower Lever 7G-8G
 Air Tower Operating Rod 1G
 Air Valve 52E
 Automatic Cutting Attachment 53E
 Auxiliary Bracket 1G
 19G
 54E
 1CK115
 11CU-8
 136E
- B** Ball Bearing 1CK119
 Base 1F
 Base Pad 33CT
 Base Tray 45CT
 Basket 9G
 Bell Crank 4D-6D
 Bell Crank Fulcrum Pin 7D
 Belt, V 41CT
 Belt Shifter Arm 2E, 3E
 Belt Shifter Eye 4E
 Belt Shifter Ring 5E
 Belt Shifter Ring Rod 6E
 Belt Shifter Operating Bar 97E
 Belt Shifter Operating Bar Connecting Rod 98E
 Belt Shifter Operating Bar Connecting Rod Guide 99E
 Belt Shifter Operating Bar Lever 100E
 Blower Casing 73H
 Blower Casing Cover 75H
 Blower Pulley 76H
 Blower Rotor 77H
 Blower Support Bracket 78H
 Box, short leads 79H
 Bracket 76F
 Bracket and Valve Box 294E
 Bridge 76A
 Bridge Lever 1A
 Bridge Lever Link Pin 2A
 Buffer, Cross Slide 3A
 Buffer Matrix Jaws, left and right 36C
 Buffer Spring 41B
 42B, 37C
- C** Cabinet, for Matrix Boxes 49CT
 Cam Lever Shaft 7E, 8E
 Cam Lever Shaft Distance Ring 93F
 Cam Lever Shaft Stand 9E
 Camshaft 10E, 11E
 Camshaft Stand 12E
 Camshaft Stand Packing Piece 168E
 Carrying Frame 4A
 Centring Pin 5A
 Centring Pin Aligning Lever 35A
 Centring Pin (Increased Diameter) Attachment 74CU
 Centring Pin Auxiliary Spring 36A
 Centring Pin Auxiliary Spring Gag 30CT
 Centring Pin Cam 13E
 Centring Pin Cam Lever 14E
 Centring Pin Cam Lever Shaft 15E
 Centring Pin Gauge 8CT
 Centring Pin Guide Post 64A
 Centring Pin Lever 16E
 Centring Pin Lever Gag Block 140E
 Centring Pin Lever Bracket 134E
 Centring Pin Stand 6A
 Centring Pin Stand Adjusting Micrometer Screw 33A
 Channel Bar 77F
 Channel Block 50F, 51F
 Clamping Screw Connecting Rod 135E
 Cleaning Tool 4CT,
 21CT,
 29CT
 146E
 101E
 102E
- Clutch Control Operating Rod Eye Pin 103E
 Clutch Gear 104E
 Clutch Shifter 105E
 Clutch Shifter Arm Rod Lever 173E
 Clutch Shifter Spring 106E
 Column Pusher 1F, 132F
 Column Pusher Adjusting Cam 2F
 Column Pusher Adjusting Cam Stand 3F
 Column Pusher Fulcrum Screw 4F
 Column Pusher Fulcrum Stud 1F
 Column Pusher Guide Bar Lever 134F
 Column Pusher Guide Bar Lever Bracket 135F
 Column Pusher Guide Bar Spring 133F
 Column Pusher Lever 5F
 Column Pusher Lever Stud 6F
 Column Pusher Spring 7F
 Column Pusher Spring Box 9F-11F,
 72F, 73F
 Column Support 62CU
 Combined Spacing Attachment 6CK,
 Condensing Tanks 7CK,
 8CK
 174E
 1CK125
- D** Cone Pulley 28G
 Connecting Rod 29G
 Control Box 26G
 Control Plate 33CU
 Copy Repeater 77A
 Copy Repeater Attachment 1CK131
 Cover Plate 42A
 Crankshaft 5C
 Cross Beam Lifting Lever 6C
 Cross Slide 7C
 Cross Slide Extension Shoe 32CT
 Cross Slide Guide 1CK139
 Crossblock Oiler 1CK144
 Cylinder Block
 Cylinder Head 9CU
 18E
 7CT
 4CT
 34CT
 86CU
 64CU
 75CU
 46CT
- E** Display Attachment 16CU
 Door 9CT
 Dowel Punch 7A
 Drills, etc. 1CK148
 Driving Pulley Extractor 29A
 Dual Type Mould Attachment 78F, 1CT
 Duplex Mould Attachment 13F
 Duplex Piston Spring Attachment 14F
 Dust Cover 213F
 15F
 16F
 208F
 17F,
 143F
 18F
 8D
 9D
 24CU
 13CT
 55H
 49H
 9H
 8CT
 19E,
 107E,
 217E
 20E
 42CT
 137E
 79F
 80F
- F** Fibre Stop 7A
 Flywheel 1CK148
 Fulcrum Bracket 29A
- G** Galley 78F, 1CT
 Galley Bar 13F
 Galley Cam 14F
 Galley Cam Guard 213F
 Galley Camshaft 15F
 Galley Cam Stand 16F
 Galley Cut-Out 208F
 Galley Pan Shelf 17F,
 143F
 18F
 8D
 9D
 24CU
 13CT
 55H
 49H
 9H
 8CT
 19E,
 107E,
 217E
 20E
 42CT
 137E
 79F
 80F
- H** High Quad Attachment 87CU
- I** Interlocking Lever 108E
 Interlocking Lever Fulcrum Stud 112E
 Interlocking Lever Operating Rod 109E
 Interlocking Lever Operating Rod Guide 110E
 Interlocking Lever Spring 111E
 Ingot Feeder 66H
 Ingot Feeder Attachment 76CU
 Ingot Mould 2CT
 Iron Ladle 3CT
- J** Jaw Tongs Bell Crank 21E
 Jaw Tongs Bell Crank Fulcrum Stud 22E
 Jaw Tongs Cam 23E
 Jaw Tongs Cam Lever 24E
 Jaw Tongs Cam Lever Shaft 25E
 Jaw Tongs Spring Box 26E
 Jaw Tongs Spring Box (double) Attachment 77CU
- L** Lamp 163H
 Large Composition Attachment 83CU
 Latch 57H
 Latch Abutment 58H
 Latch Abutment Spring 59H
 Latch Pin 60H
 Latch Spring 61H
 Latch Stand 62H
 Lead Depressor 200F
 Lead Galley 201F
 Lead Galley Operating Lever 202F
 Lead Galley Support Block 203F
 Lead Pusher 204F
 Lead and Rule Attachment 11CU
 Leading Attachment 27CU
 Lifting Frame 136F
 Lifting Frame Adjusting Lever 137F
 Lifting Frame Adjusting Lever Bell Crank 139F
 Lifting Frame Adjusting Lever Bell Crank Slide 140F
 Lifting Frame Adjusting Lever Bell Crank Spring 141F
 Lifting Frame Adjusting Lever Spring 138F
 Lifting Frame Lifting Rod 142F
 Lighting Attachment 63CU
 Line Hook 19F
 Line Hook Carriage 20F
 Line Hook Operating Bar 21F
 Line Hook Operating Bar Stop 22F
 Line Hook Operating Slide 23F
 Line Hook Operating Slide Latch 24F
 Line Hook Operating Slide Shoe 25F
 Line Hook Operating Slide Lever 26F
 Line Hook Operating Slide Lever Stud 27F
 Line Hook Operating Slide Spring Box 28F
 Line Hook Stud 29F, 30F
 Line Support 54F
 Line Support Pusher 217F
 Line Support Pusher Catch Plate 55F
 Line Support Pusher Spring Box 211F
 Line Support Pusher Spring Box Chain 212F
 Locking Bar Bell Crank 28E
 Locking Bar Bell Crank Stud 32E
 Locking Bar Cam 86E
 Locking Bar Cam Lever 34E
 Locking Bar Cam Lever Fulcrum Stud 35E
 Locking Bar Operating Rod 33E
- M** Main Bracket 81F
 Main Bracket Buffer 82F
 Main Bracket Screw 106F
 Main Bracket Shield 107F
 Main Galley Stand 31F
 Main Stand 36E
 Mathematical Attachment 93CU
 Matrix Assembling Fixture 56A
 Matrix Case 8A
 Matrix Holder 34A,
 37A,
 40A,
 48A,
 49A, 62A
 89CU
 Matrix Holder, Flanged 'Monotype' Thompson Matrices Attachment 89CU
 Matrix Case Positioner 34B
 Matrix Case Positioner Guide Rod 35B
 Matrix Case Positioner Guide Rod Stand 43B
 Matrix Jaw 5B, 6B,
 8C, 9C
 7B
 Matrix Jaw Latch 9B-11B
 Matrix Jaw Shoe Packing Block 12B, 12C
 Matrix Jaw Stop Rack Locking Bar 13B, 13C
 Matrix Jaw Tongs 37E, 38E
 Matrix Jaw Tongs Stud 39E, 40E
 Melting Pot 12H,
 53H
- Jaw Tongs Spring Box Ball Socket 27E, 81E
 Justification and Normal Wedge Gauge 69D
 Justification Wedge 10D,
 10D,
 11D
 Justification Wedge Centring Tooth 12D
 Justification Wedge Lever 13D,
 14D,
 15D
 Justification Wedge Lever Arm 16D
 Justification Wedge Lever Arm Spring 17D
 Justification Wedge Lever Fulcrum Pin 18D
 Justification Wedge Position Plate 66D
 Justification Wedge Stop Block 19D