

a36E102	Air Pipe N, Valve Box to Tee (see Plate 53)	a36E381	Air Pipe, D+Constant Air, Part 1, Valve Box Holding Plate Constant Air, "Unit Shift" to B Block Piston, operating Sliding Frame Draw Rod, 99CU
36E103	Air Pipe Connector (see Plate 53)	36E382	Air Pipe, E, Tee to E Pin, C Block
36E104	Air Pipe Connector Nut (see Plate 53)	36E383	Air Pipe, E, Tee to Valve Box Holding Plate "Unit Shift"
36E105	Air Pipe Nipple (see Plate 53)	a36E383	Air Pipe, E, Part 1, Tee to Valve Box Holding Plate, "Unit Shift", 99CU
36E106	Air Pipe Nut (see Plate 53)	36E384	Air Pipe, F, Tee to F Pin, C Block
36E107	Air Pipe Tee (see Plate 53)	36E385	Air Pipe, F, Tee to Valve Box Holding Plate "Unit Shift"
36E108	Air Pipe Connector, Pipe N, Air Tower to Tee	a36E385	Air Pipe, F, Part 1, Tee to Valve Box Holding Plate, "Unit Shift", 99CU
36E109	Air Pipe Nut	36E386	Air Pipe, Constant Air, Expansion Elbow to Valve Box Holding Plate "Unit Shift"
36E110	Air Pipe Connector, Pipe N, Tee to C Block	a36E386	Air Pipe, Constant Air, Expansion Elbow to Valve Box Holding Plate, Constant Air "Unit Shift", 99CU
36E111	Air Pipe Nut	36E387	Air Pipe Connector
36E112	Air Pipe N+·0075", Part 1, Valve Box to Bridge (see Plate 53)	36E388	Air Pipe Connector Lock Nut
36E113	Air Pipe Nipple	36E389	Air Pipe Nipple (8)
36E115	Air Pipe Nut, small	36E390	Air Pipe Nut, large (3)
36E116††	Air Pipe N+·0075", Part 2, Valve Box to Bridge (see Plate 53)	a36E390	Air Pipe Connector Nut (7), 99CU
36E118	Air Pipe Union (see Plate 53)	36E391	Air Pipe Nut, small (8)
36E119	Air Pipe ·0075", Valve Box to Pipe from Air Tower (see Plate 53)	36E392	Air Pipe Tee (2)
36E120	Air Pipe Nipple	a36E392	Air Pipe Tee (2), 99CU
36E122	Air Pipe Nut, small	36E393	Air Pipe Connector Cap, 99CU
36E123	Air Pipe Connector, Pipe ·0075", Air Tower to Union (see Plate 53)	36E394	Air Pipe ·0005", Tee to D Block
36E124	Air Pipe Connector Nut (see Plate 53)	36E395	Air Pipe Tee
36E125	Air Pipe Connector Union (see Plate 53)	36E396	Air Pipe Tee Cap (2)
36E126††	Air Pipe ·0075", Valve Box to Pipe from D Block	36E397	Air Pipe, Part 2
a36E126	Air Pipe ·0075", Valve Box to Pipe from D Block (see Plate 53)	36E398	Air Pipe Connector
36E127	Air Pipe Nipple	36E399	Air Pipe Connector Cap (2)
36E129	Air Pipe Nut, small	36E414	Air Pipe, D, Part 2, 99CU4 to 21
36E130	Air Pipe Connector, Pipe ·0075" to D Block	36E415	Air Pipe, D+Constant Air, Part 2, 99CU4 to 21
36E131	Air Pipe Connector Nut	36E416	Air Pipe, E, Part 2, 99CU4 to 21
36E132	Air Pipe Connector Union	36E417	Air Pipe, E, Tee to C Block, 99CU4 to 21
36E133	Make-up Washer (2), for Valve Box Holding Plate (see Plate 53)	36E418	Air Pipe, F, Part 2, 99CU4 to 21
		36E419	Air Pipe, F, Tee to C Block, 99CU4 to 21
		36E420	Air Pipe Connector (5), 99CU4 to 21
		36E421	Air Pipe Connector, large end, 99CU4 to 21
		36E422	Air Pipe Connector, small end (7), 99CU4 to 21
		36E423	Air Pipe Union (4), 99CU4 to 21
		Xu36E	Main Stand, Type and Rule Caster, group; consists of u36EE, 36E34, 35 and 36, 36E37(2), 36E38(4), 36E140
		Xpw36E††	Main Stand group; consists of pw36EE, 36E34, 35 and 36, 36E37(2), 36E38(4), 36E140
		Xqw36E††	Main Stand group; consists of qw36EE, 36E34, 35 and 36, 36E37(2), 36E38(4), 36E140
		Xkw36E	Main Stand, Triplex Mould Attachment, group; consists of kw36EE, 36E34, 35 and 36, 36E37(2), 36E38(4), 36E140, 36E318, 36E320 and 321, a36E322, 36E323 and 324, 36E360(2), *u36EE consists of u36E, a36E33, b36E39(2), a36E43, 36E44 to 47 inclusive, 36E48(2), 36E49(2), a36E87, a36E88(2), 36E134, 36E139, 36E272(3) †pw36EE consists of pw36E, 36E1 to 14 inclusive, a36E15, 16 and 17, b36E18 and 19, c36E20, 36E21, b36E22, 36E23, 36E26 and 27, 36E31, a36E33, b36E39(2), a36E43, 36E44 to 47 inclusive, 36E48(2), 36E49(2), a36E87, a36E88(2), 36E90(5), 36E99 and 100, 36E134, 36E139, 36E141 to 154 inclusive, 36E159 to 175 inclusive, b36E176, 36E177 and 178, a36E179, 36E180 to 187 inclusive, 36E272(3), 36E367, 36E375, 36E379 to 385 inclusive, 36E389(7), 36E390(3), 36E391(7), 36E392(2), 36E394 and 395, 36E396(2), 36E397 and 398, 36E399(2), a211E1, 211E5, 211E7 and 8, X212E, a213E1, 213E5(2), 213E7(2), 216E8, 216E9(2), 216E17, 216E18(4), 222E21, 222E22E, 222E24(4), 222E25(2), 302E6, 302E7E, 302E9(4), 302E10(2) †qw36EE consists of qw36E, 36E1 to 14 inclusive, a36E15, 16 and 17, b36E18 and 19, c36E20, 36E21, b36E22, 36E23, 36E26 and 27, 36E31, a36E33, b36E39(2), a36E43, 36E44 to 47 inclusive, 36E48(2), 36E49(2), a36E87, a36E88(2), 36E90(5), 36E99 and 100, a36E102, 36E103 to 113 inclusive, 36E115 and 116, 36E118, 119 and 120, 36E122 to 125 inclusive, a36E126, 36E127, 36E129 to 132 inclusive, 36E133(2), 36E134, 36E139, 36E141 to 154 inclusive, 36E159 to 175 inclusive, b36E176, 36E177 and 178, a36E179, 36E180 to 187 inclusive, 36E272(3), 36E367, 36E375, 36E379 to 385 inclusive, 36E389(7), 36E390(3), 36E391(7), 36E392(2), 36E394 and 395, 36E396(2), 36E397 and 398, 36E399(2),
TRIPLEX MOULD ATTACHMENT			
kw36EE§††	Main Stand		
36E304	Air Pipe N+·0005", Part 1, Valve Box to Bridge (see Plate 57)		
36E305	Air Pipe Nipple		
36E306	Air Pipe Nut		
36E307	Air Pipe N+·0005", Part 2, Valve Box to Bridge (see Plate 57)		
36E308	Air Pipe Union (see Plate 57)		
36E309	Air Pipe ·0005", Unit Adding to Valve Box (see Plate 57)		
36E310	Air Pipe Nipple		
36E311	Air Pipe Nut		
36E312	Air Pipe ·0005", Part 1, Valve Box to D Block (see Plate 57)		
36E313	Air Pipe Nipple		
36E314	Air Pipe Nut		
36E315	Air Pipe Union (see Plate 57)		
36E316	Air Pipe Connector, Pipe ·0005", Part 2, Valve Box to D Block (see Plate 57)		
36E317	Air Pipe Connector Nut (see Plate 57)		
36E318	Air Pipe, Constant Air, Part 1, Air Expansion Elbow to Bridge (see Plate 57)		
36E319	Air Pipe, Constant Air, Part 2, Air Expansion Elbow to Bridge (see Plate 57)		
36E320	Air Pipe Clip (3) (see Plate 57)		
36E321	Air Pipe Clip Screw (3), $\frac{1}{8} \times \frac{3}{16}$ " (see Plate 57)		
a36E322	Air Pipe Cock with Nuts (see Plate 57)		
36E323	Air Pipe Connector (see Plate 57)		
36E324	Air Pipe Connector Lock Nut (see Plate 57)		
36E325	Make-up Washer, for Valve Box Holding Plate (see Plate 57)		
36E339	Air Pipe Connector, Mathematical Attachment (refer after 36E272)		
36E354	Air Pipe Nut, Two-Colour Attachment		
36E355	Air Pipe ·0005", Part 2, Two-Colour Attachment		
36E356	Air Pipe Union, Two-Colour Attachment		
36E357	Air Pipe Cock Connector (4), 86CU3		
36E358	Air Pipe Cock Connector (4), 86CU3		
36E359	Air Pipe Cock Connector (2), Triplex Mould Attachment		
36E367	Air Pipe, H, Tee to H Pin, C Block		
36E375	Air Pipe Tee		
a36E377	Air Pipe Connector, to Expansion Elbow, 99CU		
36E379	Air Pipe, D, Valve Box Holding Plate "Unit Shift" to D Pin, C Block		
a36E379	Air Pipe, D, Part 1, Valve Box Holding Plate, "Unit Shift" to C Block, 99CU		
36E380	Air Pipe, D, Valve Box Holding Plate "Unit Shift" (Loop)		
a36E380	Air Pipe, D, Valve Box Holding Plate, "Unit Shift" (Loop) 99CU		
36E381	Air Pipe, D+Constant Air, Valve Box Holding Plate, "Unit Shift" to B Block Piston Operating Sliding Frame Draw Rod		