

## 21E

b21E	<b>Jaw Tongs Bell Crank</b> , lower (Not supplied separately, order Xc21E)
b21E1	Ball Stud
21E2	Stud, long
21E3	Stud Nut, lower
21E4	Stud Nut, upper
21E5	Stud Washer
21E6	Stud short
21E7	Stud Nut, lower
21E8	Stud Nut, upper
21E9	Stud Washer
c21E10	<b>Jaw Tongs Bell Crank</b> , upper (Not supplied separately, order Xc21E)
b21E11	Ball Stud
21E14	Ball Stud Clamp Bolt, for b21E1
21E15	Ball Stud Clamp Bolt Collar
21E16	Ball Stud Clamp Bolt Nut
21E17	Ball Stud Clamp Bolt Spring Washer
21E18	Ball Stud Clamp Bolt, for b21E11
21E19	Ball Stud Clamp Bolt Collar
21E20	Ball Stud Clamp Bolt Nut
21E21	Ball Stud Clamp Bolt Spring Washer
Xc21E	<b>Jaw Tongs Bell Crank</b> group; consists of b21E, b21E1, 21E2 to 9 inclusive, c21E10, b21E11, 21E14 to 21 inclusive

## 26E

	<b>Jaw Tongs Spring Box</b> , double
a26E1†	Ball Extension
a26E2	Ball Socket, left bearing for Ball
a26E3	Ball Socket Guide Pin
a26E4	Ball Socket Plug
a26E5	Ball Socket Plug Button
c26E6E*	Ball Plug, right bearing for Ball
a26E7	Ball Plug Nut
a26E8	Ball Plug Washer
c26E9	Spring, inside (4)
b26E11§	Spring Abutment (4)

d26E11	Spring Abutment, end (4)
a26E12	Spring Brake (2)
a26E13§	Spring Brake Cone (2)
b26E13	Spring Brake Cone (2)
b26E14§	Spring Rod, lower
c26E14	Spring Rod, lower
b26E15§	Spring Rod Nut
c26E15	Spring Rod Nut
b26E16§	Spring Rod Nut Lock Nut
c26E16	Spring Rod Nut Lock Nut
b26E17§	Spring Rod, upper
c26E17	Spring Rod, upper
a26E18	Spring Rod Lock Nut, Crosshead end
b26E19§	Spring Rod Nut
c26E19	Spring Rod Nut
b26E20§	Spring Rod Nut Lock Nut
c26E20	Spring Rod Nut Lock Nut
a26E21	Spring Rod Crosshead
a26E22	Spring Rod Crosshead Ball Plug
a26E23	Spring Rod Crosshead Ball Plug Lock Nut
a26E24§	Tube (2)
b26E24	Tube (2)
b26E25E†	Tube Cap
a26E26	Tube Cap Stud (2)
a26E27	Tube Cap Stud Nut (2)
b26E28	Tube Plate
a26E29	Ball Plug Pad
26E30	Tube Cap Cover, for Oil Box (see Plate 16)
26E31	Tube Cap Cover Screw (2), $\frac{5}{32}'' \times \frac{5}{16}''$ , to Cap (see Plate 16)
26E32	Tube Cap Pad, for oiling Extension
26E34	Ball Plug Pin
26E35	Grease Nipple (2), to Spring Rod Nut Lock Nut
26E36	Spring Abutment, centre (2)
Xc26E†	<b>Jaw Tongs Spring Box</b> , double, group; consists of a26E1 and 2, a26E4 and 5, c26E6E, a26E7 and 8, c26E9(4), d26E11(4), a26E12(2), b26E13(2), c26E14 to 17 inclusive, a26E18, c26E19 and 20,

XXc26E

a26E21, 22 and 23, b26E24(2), b26E25E, a26E26(2), a26E27(2), b26E28, a26E29, 26E30, 26E31(2), 26E32, 26E35(2) 26E36, Xa27E, Xa81E  
Jaw Tongs Bell Crank and Spring Box, complete, consists of Xc21E, Xc26E  
\*c26E6E consists of c26E6, 26E34  
†b26E25E consists of a26E3, b26E25  
‡Can be fitted only at Workshops  
§Composition Casters numbered 22001 to 22554 inclusive were equipped with these parts

## 27E

a27E	<b>Jaw Tongs Spring Box Ball Socket</b> , lower Lock Nut
a27E1	Jaw Tongs Spring Box Ball Socket, lower, group; consists of a27E, a27E1
Xa27E	

## 81E

a81E	<b>Jaw Tongs Spring Box Ball Socket</b> , upper Lock Nut
a81E1	Jaw Tongs Spring Box Ball Socket, upper, group; consists of a81E, a81E1
Xa81E	

## 77CU

**Jaw Tongs Spring Box**, double (with grease gun lubrication), **Attachment**  
Object—To provide grease gun lubrication for the Jaw Tongs Spring Box, double  
For Composition Casters numbered 22001 to 22554  
**Jaw Tongs Spring Box**, double (with grease gun lubrication), **Attachment**; consists of d26E11(4), b26E13(2), c26E14 to 17 inclusive, c26E19 and 20, b26E24(2), b26E28, 26E35(2), 42CT1

77CU