

26E

Jaw Tongs Spring Box, double

26E30 Tube Cap Cover, for Oil Box
26E31 Tube Cap Cover Screw (2), $\frac{5}{32}'' \times \frac{5}{16}''$,
to Cap

37E

Matrix Jaw Tongs, front

a37E1* Connecting Link
a37E3* Connecting Link Pin (2)
a37E4* Lever, lower (2)
b37E5* Lever Distance Piece (2)
37E6* Link, centre (2)
37E7* Link Pin (2)
b37E8* Lever, upper (2)
a37E9* Fulcrum Pin (2)
a37E10* Fulcrum Pin Ring (2)
b37E11 Lock Slide (2)
b37E12 Lock Slide Spring (2)
Xb37E Matrix Jaw Tongs, front, group; consists
of a37E1, a37E3(2), a37E4(2), b37E5(2),
37E6(2), 37E7(2), b37E8(2), a37E9(2),
a37E10(2), b37E11(2), b37E12(2)

*These parts of the Tongs are not supplied
separately, but loan Tongs can be sup-
plied while customers' worn Tongs are
being repaired

38E

Matrix Jaw Tongs, rear

b38E1* Connecting Link
38E6* Connecting Link Pin (2)
b38E7* Lever, lower (2)
b38E8* Lever Distance Piece (2)
38E9* Link, centre (2)
38E10* Link Pin, centre (2)
d38E11* Lever, upper (2)
a38E13* Fulcrum Pin (2)
a38E14* Fulcrum Pin Ring (2)
b38E15 Lock Slide (2)
b38E16 Lock Slide Spring (2)
Xc38E Matrix Jaw Tongs, rear, group; consists
of b38E1, 38E6(2), b38E7(2), b38E8(2),
38E9(2), 38E10(2), d38E11(2), a38E13(2),
a38E14(2), b38E15(2), b38E16(2)

*These parts of the Tongs are not supplied
separately, but loan Tongs can be sup-
plied while customers' worn Tongs are
being repaired

55E

Pin Jaw Tongs, front

a55E1|| Lever Connecting Yoke, right hand thread
a55E2|| Lever Connecting Yoke, left hand thread
a55E3E* Lever, left
b55E4E† Lever, right, Part 1
55E3|| Lever Bush, end (2)
55E6|| Lever Bush Washer, end (2)
55E7|| Lever Bush, centre
55E8|| Lever Bush Washer, centre
55E9|| Lever Link, upper
55E10|| Lever Link, lower
55E11|| Lever Link Fulcrum Pin
55E12|| Lever Link Bush
55E13 Lever Post, for Pin Jaw Tongs Spring
Connecting Link, long, front

a55E14|| Lever Connecting Yoke Pin
a55E15 Adjusting Stud
a55E15 assd.† Adjusting Stud, assembled
a55E16 Adjusting Stud Lock Nut, right hand
a55E17 Adjusting Stud Lock Nut, left hand
b55E20E§ Lever, right, Part 2
55E21 Lever Fulcrum Screw
55E22 Lever Fulcrum Screw Nut
55E23 Lever Fulcrum Screw Washer
a55E24 Lever Plunger
55E25|| Lever Plunger Housing
a55E26 Lever Plunger Spring
55E27|| Lever Plunger Housing Washer
55E28|| Lever Bush, centre
55E29|| Lever Bush Washer, centre
55E30|| Lever Link, upper
55E31|| Lever Connecting Yoke Pin
55E32|| Lever Bush
55E33|| Lever Bush Washer
55E34|| Lever Bush, end
55E35|| Lever Bush Washer, end
55E36|| Lever Link, lower
55E37|| Lever Link Bush
55E38|| Lever Link Fulcrum Pin
Xc55E Pin Jaw Tongs, front, group; consists of
a55E3E, b55E4E, a55E15 assd., b55E20E,
55E21, 22 and 23

*a55E3E consists of a55E1, a55E3, 55E5(2),
55E6(2), 55E7 to 13 inclusive, a55E14
†b55E4E consists of b55E4, 55E32 and 33
‡a55E15 assd. consists of a55E15, 16 and 17
§b55E20E consists of a55E2, b55E20, a55E24,
55E25, a55E26, 55E27 to 31 inclusive,
55E34 to 38 inclusive

||These parts of the Tongs are not supplied
separately, but loan Tongs can be sup-
plied while customers' worn Tongs are
being repaired

56E

Pin Jaw Tongs, rear

56E1† Connecting Yoke, right hand
56E2† Connecting Yoke, left hand
56E3 Connecting Yoke Adjusting Stud
56E3 assd.* Connecting Yoke Adjusting Stud,
assembled
56E4 Connecting Yoke Adjusting Stud Lock
Nut, right hand
56E5 Connecting Yoke Adjusting Stud Lock
Nut, left hand
56E6† Connecting Yoke Pin (2)
a56E7† Lever, front
a56E8† Lever, rear
56E9† Lever Bush, end (4)
56E10† Lever Bush, centre (2)
56E11† Lever Bush Washer (4)
56E12† Lever Bush Washer (2)
56E13† Link, with oil hole (2)
56E14† Link Bush, Stud end (2)
56E15† Link Fulcrum Pin (2)
56E16† Link (lower link at centre of Pin Jaw
Tongs Lever, rear)
56E17 Post, for Pin Jaw Tongs Spring Connect-
ing Link, short, rear
56E18† Link, without oil hole
Xa56E Pin Jaw Tongs, rear, group; consists of
56E1 and 2, 56E3 assd., 56E6(2), a56E7
and 8, 56E9(4), 56E10(2), 56E11(4),

56E12(2), 56E13(2), 56E14(2), 56E15(2),
56E16, 17 and 18

*56E3 assd. consists of 56E3, 4 and 5
†These parts of the Tongs are not supplied
separately, but loan Tongs can be sup-
plied while customers' worn Tongs are
being repaired

57E

a57E Pin Jaw Tongs Spring, inner
a57E1 Pin Jaw Tongs Spring, outer
57E2 Guide Tube
57E3 Guide Tube Eye
57E4 Guide Tube Nut
57E5 Guide Tube Spring Sleeve
57E6* Guide Rod
57E7 Guide Rod Spring Plate
57E8 Guide Rod Spring Plate Rivet
Xa57E Pin Jaw Tongs Spring group; consists of
a57E, a57E1, 57E2 to 5 inclusive, 57E6E
*57E6E consists of 57E6, 7 and 8

58E

a58EE* Pin Jaw Tongs Spring Bell Crank
58E1 Pin, for Spring Connecting Link
58E2 Pin, for Spring Guide Tube Eye
58E3 Pin Split Pin, $\frac{1}{16}'' \times \frac{1}{2}''$
Xa58E Pin Jaw Tongs Spring Bell Crank group;
consists of a58EE, 58E3
*a58EE consists of a58E, 58E1 and 2

59E

59E Pin Jaw Tongs Spring Bell Crank Stud
59E1 Nut, lower
59E2 Nut, upper
59E3 Washer
X59E Pin Jaw Tongs Spring Bell Crank Stud
group; consists of 59E, 59E1, 2 and 3

60E

60E Pin Jaw Tongs Spring Connecting Link,
long, front

61E

61E Pin Jaw Tongs Spring Connecting Link,
short, rear

62E

a62E Pin Jaw Tongs Spring Lever (Not supplied
separately, order Xa62E)
62E1 Pin, for Connecting Link
62E2 Pin, for Guide Rod Spring Plate
Xa62E Pin Jaw Tongs Spring Lever group; con-
sists of a62E, 62E1 and 2

63E

a63E Pin Jaw Tongs Stud, rear
63E1 Nut, lower
63E2 Nut, upper
63E3 Washer
Xa63E Pin Jaw Tongs Stud, rear, group; consists
of a63E, 63E1, 2 and 3