

SYMBOL	PLATE	DESCRIPTION	SYMBOL	PLATE	DESCRIPTION	SYMBOL	PLATE	DESCRIPTION
137E	39	Guard, on Auxiliary Bracket	72F	21	Column Support, No. 1	9G	22	Basket
138E	39	Operating Bar Lever	73F	21	Column Support, No. 2	10G	23	Nameplate
139E	39	Operating Bar Lever Fulcrum Pin	76F	40	Box, for short Leads	11G	22	Paper Tension Roller
140E	35	Centring Pin Lever Gag Block	77F	41	Channel Bar	12G	22	Paper Feed Locking Lever
141E	39	Spring Box	78F	41	Galley	13G	22	Paper Feed and Locking Pawl
142E	39	Spring Box Lever	79F	39	Guide Plate	14G	22	Paper Feed Pawl Ring
143E	39	Spring Box Lever Fulcrum Pin	80F	41	Guide Roller	15G	22	Paper Feed Pawl Stud, lower
144E	39	Spring Box Lever Link	81F	41	Main Bracket	16G	22	Paper Feed Pawl Stud, upper
145E	39	Spring Box Lever Link Pin	82F	40	Main Bracket Buffer	17G	23	Paper Feed Spring Box
146E	56	Clutch	83F	42	Shear Blade	18G	23	Paper Tension Bar
148E	40	Shear Cam	84F	41	Shear Blade Guide	19G	22	Air Tower Lever
168E	12	Camshaft Stand Packing Piece	85F	41	Shear Blade Shoe	20G	22	Pin Wheel
169E	29	Starting Bar	86F	41	Shear Blade Shoe Tube Clamp	21G	23	Winding Spool
170E	29	Starting Bar Lock Bracket	87F	41	Shear Blade Shoe Tube Guide	22G	22	Winding Spool Driving Shaft
171E	29	Starting Bar Lock Bracket Stud	88F	41	Shear Gauge	23G	22	Winding Spool Driving Ratchet
172E	29	Starting Bar Stud	89F	41	Shear Gauge Spring	24G	22	Winding Spool Operating Spring
173E	56	Clutch Shifter Arm Rod Lever	90F	40	Stacker Plate	25G	23	Winding Spool Spring Box Plunger
174E	56	Cone Pulley and Lever	91F	40	Stacker Rock Shaft	26G	44	Copy Repeater
175E	56	Pulley Lever Bracket	92F	41	Stack Support Block	27G	23	Paper Reader
197E	29	Nameplate	93F	41	Supporting Beam	28G	50	Control Box, "Repeater", Paper Feed
198E	36	Patent Plate	94F	41	Supporting Beam Bracket, right	29G	49	Control Plate, "Quadding"
199E	13	Oil Splash Guard, large	95F	41	Supporting Beam Bracket, left	30G	51	Paper Ribbon Rewinder
200E	13	Oil Splash Guard, small	96F	41	Transfer Bar, rear	1H	27	Air Pipe
209E	50	Air Pipe	97F	40	Transfer Bar, front	2H	27	Air Cock
210E	50	Air Pipe	100F	40	Transfer Bar Hanger Rod	9H	27	Gas Pipe
211E	50	Air Pipe	101F	42	Transfer Bar Operating Lever	12H	24	Melting Pot
212E	50	Air Pipe	102F	42	Transfer Bar Operating Lever Adjusting Screw	13H	24	Melting Pot Chimney
213E	50	Air Pipe				14H	26	Nozzle
214E	50	Air Pipe	103F	42	Transfer Bar Hanger Spring, long	16H	27	Pipe Bracket
215E	50	Air Pipe Connection Block	104F	41	Transfer Bar Hanger Spring, short	17H	26	Piston
216E	50	Valve Box, Control	105F	40	Patent Plate	18H	24	Piston Lever
217E	36	Gear Cover, bottom	106F	42	Main Bracket Screw	19H	25	Piston Operating Rod
218E	50	Air Pipe	107F	40	Main Bracket Shield	20H	25	Piston Spring
222E	43	Valve Box, Unit Adding	108F	42	Shear Bell Crank	21H	25	Pump Bell Crank
245E	57	Valve Box	109F	42	Shear Bell Crank Adjusting Screw	22H	14	Pump Bell Crank Connecting Rod
293E	58	Air Pipe	110F	40	Shear Cam Lever	23H	26	Pump Body and Piston
294E	59	Bracket	111F	40	Shear Cam Lever Fulcrum Pin	24H	25	Pump Body Lever
295E	59	Switch Box	112F	29	Shear Cam Lever Fulcrum Pin	25H	24	Pump Body Lifting Lever, Piston End
296E	59	Valve Box "Mathematical"	113F	40	Shear Cam Lever Fulcrum Pin Bracket	26H	25	Pump Body Lifting Lever, Nozzle End
297E	59	Valve Operating Arm	114F	40	Shear Cam Lever Spring	27H	24	Pump Body Lifting Spring
301E	52	Speed Indicator	115F	42	Shear Operating Pin	28H	24	Pump Body Operating Rod
302E	60	Valve Box, "Unit Shift"	116F	41	Shear Trip Lever	29H	24	Pump Body Operating Rod Lever
303E	60	Valve Box, Constant Air, "Unit Shift"	117F	40	Shear Trip Lever Spring	31H	24	Pump Body Spring
304E	60	Valve Box, "Unit Shift"	118F	42	Shear Trip Lever Spring Bar	32H	24	Pump Lever Connecting Link
305E	60	Air Pipe, Valve Box, "Unit Shift"	119F	42	Shear Yoke	33H	14	Pump Rocker Arm
	1F	Column Pusher	120F	42	Shear Yoke Spring	34H	14	Pump Operating Lever
	2F	Column Pusher Adjusting Cam	121F	41	Stacker Rock Shaft Connecting Rod	35H	10	Pump Trip (Hand)
	3F	Column Pusher Adjusting Cam Stand	122F	40	Thrust Bar	37H	25	Swing Frame
	4F	Column Pusher Fulcrum Screw	123F	40	Thrust Bar Bell Crank	38H	25	Swing Frame Post
	5F	Column Pusher Lever	124F	40	Thrust Bar Bell Crank Fulcrum Pin	39H	25	Swing Frame Rack
	6F	Column Pusher Lever Stud	125F	42	Thrust Bar Bell Crank Operating Bar	40H	25	Swing Frame Wormshaft Crank
	7F	Column Pusher Spring	126F	42	Thrust Bar Bell Crank Spring, short	42H	27	Water Escape Valve
	8F	Column Pusher Spring Box	127F	40	Thrust Bar Bell Crank Spring, long	43H	27	Water Pipe, Drain
	9F	Column Support, No. 4	128F	42	Thrust Bar Latch	44H	27	Water Pipe, Drain
	10F	Column Support, No. 5	129F	42	Thrust Bar Operating Rod	45H	27	Water Supply Pipe
	11F	Column Support, No. 6	132F	46	Column Pusher	46H	27	Water Pipe, Drain
	13F	Galley Bar	133F	46	Column Pusher Guide Bar Spring	47H	27	Water Pipe Connection, side, on Main Stand
	14F	Galley Cam	134F	46	Column Pusher Guide Bar Lever			
	15F	Galley Camshaft	135F	46	Column Pusher Guide Bar Lever Bracket	48H	27	Water Supply Valve
	16F	Galley Cam Stand				49H	28	Gas Hose, Armoured
	17F	Galley Pan Shelf	136F	46	Lifting Frame	52H	27	Water Supply Valve and Piping
	18F	Galley Pan Support	137F	46	Lifting Frame Adjusting Lever	53H	28	Melting Pot, Heater and Temperature Regulator, Electric
	19F	Line Hook	138F	46	Lifting Frame Adjusting Lever Spring			
	20F	Line Hook Carriage	139F	46	Lifting Frame Adjusting Lever Bell Crank	55H	28	Gas Burner
	21F	Line Hook Operating Bar				57H	35	Latch
	22F	Line Hook Operating Bar Stop	140F	46	Lifting Frame Adjusting Lever Bell Crank Slide	58H	35	Latch Abutment
	23F	Line Hook Operating Slide				59H	35	Latch Abutment Spring
	24F	Line Hook Operating Slide Shoe	141F	46	Lifting Frame Adjusting Lever Bell Crank Spring	60H	35	Latch Pin
	25F	Line Hook Operating Slide Lever				61H	35	Latch Spring
	26F	Line Hook Operating Slide Lever Stud	142F	46	Lifting Frame Lifting Rod	62H	35	Latch Stand
	27F	Line Hook Operating Slide Spring Box	143F	45	Galley Pan Shelf, left	63H	35	Pump Body Spring Rod Stop Plate
	28F	Line Hook Stud	146F	46	Nameplate	66H	55	Ingot Feeder
	29F	Line Support, thin	148F	45	Stop Slide Trip Bar	67H	55	Support
	30F	Line Support, thick	149F	45	Type Channel Block Bracket	70H	28	Temperature Regulator, Gas
	31F	Main Galley Stand	150F	45	Type Channel Block Bracket Screw	73H	56	Blower Casing
	32F	Operating Lever	175F	41	Shear Blade Shoe Tube Friction Plate	75H	56	Blower Casing Cover, front
	33F	Operating Lever Latch	176F	40	Transfer Bar Guard	76H	56	Blower Casing Cover, rear
	34F	Operating Lever Latch Spring	200F	47	Lead Depressor	77H	56	Blower Pulley
	35F	Operating Lever Latch Spring Post, in Main Galley Stand	201F	47	Lead Galley	78H	56	Blower Rotor
			202F	48	Lead Galley Operating Lever	79H	56	Blower Support Bracket
	36F	Operating Lever Latch Stand	203F	47	Lead Galley Support Block	161H	51	Pump Stroke Counter
	37F	Operating Lever Spring Box	204F	47	Lead Pusher	162H	52	"Pluslite"
	38F	Operating Lever Stud	205F	47	Rule Guide	163H	52	Lamp
	39F	Rule	206F	48	Valve Box	1CK101	32	Air Filter, felt
	40F	Rule Lever	207F	48	Valve Box Air Piping	1CK108	30	Air Flange
	41F	Rule Lever Stud	208F	48	Galley Cut-out	1CK115	32	Air Valve
	42F	Tool Tray	211F	21	Line Support Pusher Spring Box	1CK119	31	Ball Bearing, for Crankshaft
	43F	Tool Tray Support Bar	212F	21	Line Support Pusher Spring Box Chain	1CK125	31	Connecting Rod
	44F	Stop Slide	213F	48	Galley Cam Guard	1CK131	31	Crankshaft
	45F	Trip Lever	217F	49	Line Support Pusher Catch	1CK139	30	Cylinder Block
	46F	Trip Lever Fulcrum Rod	218F	49	Trip, Repeater	1CK144	30	Cylinder Head
	47F	Trip Lever Spring	219F	49	Trip Gauge Bar, Repeater	1CK148	31	Flywheel
	48F	Trip Lever Spring Post	220F	50	Valve, Repeater Release	1CK149	30	Nameplate
	49F	Type Channel Plate	1G	22	Air Tower Housing	1CK151	30	Oil Chamber and Air Filter Case
	50F	Type Channel Block, adjustable	2G	23	Air Bar, including Valve Body	1CK158	32	Oil Feed Adjusting Valve
	51F	Type Channel Block, fixed	3G	22	Air Bar Clamping Lever	1CK162	30	Oil Filler
	52F	Column Support, No. 3	4G	23	Air Bar Clamping Lever Connecting Rod	1CK168	32	Oil Filter
	53F	Line Hook Operating Slide Latch				1CK170	30	Oil Pump Housing
	54F	Line Support Pusher	5G	23	Air Bar Shaft	1CK176	32	Oil Pump Piston
	55F	Line Support Pusher Catch Plate	6G	23	Air Pipe, to Air Bar	1CK181	32	Oil Pump, Valve
	70F	Type Channel Block Stand	7G	22	Air Pipe Cover, right	1CK188	32	Oil Tray, in Cylinder Block
	71F	Operating Lever	8G	23	Air Pipe Cover, left	1CK190	30	Oiling Instruction Plate