



and not the sleeve b13KB12; regulate its final position, that is, with the middle pin 13KB2 to the rear, and then mesh the gear 12KB1 again with the pinion. Note that the adjustment holds when the mechanism is released. Replace the washer a46KB34 and screw a46KB33.

JUSTIFYING SCALE POINTER

One Adjustment—position of pointer g14KB1.

OBJECT

That the pointer g14KB1 shall indicate the correct column of figures on the justifying scale.