

JUSTIFYING SCALE POINTER

For keyboards equipped with Electric Light Attachment.

Two Adjustments


First: Position of pointer g14KB1.

Second: Position of illuminator scale 61KB11.

First

OBJECT

That the pointer g14KB1 shall indicate the correct column of figures on the justifying scale.

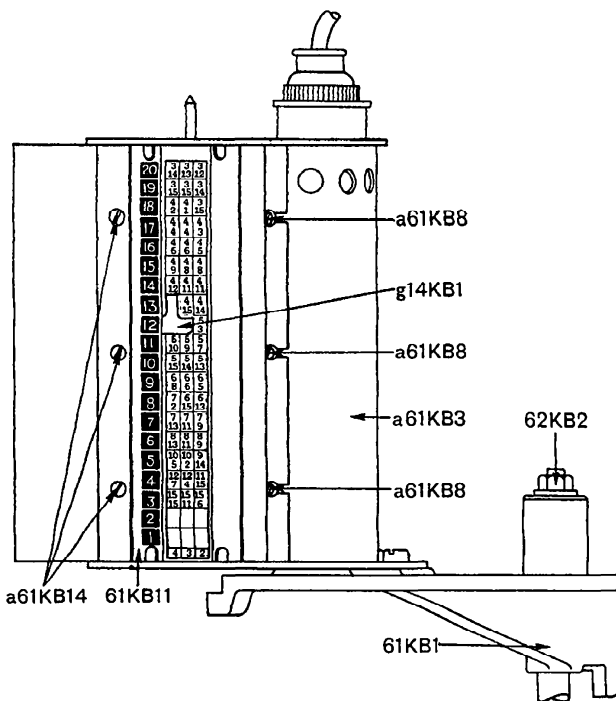

PRELIMINARY

Turn on the air.

Move the em rack pointer a4KB3 to $3\frac{1}{2}$ ems from zero.

See that the adjustment of the justifying scale is correct.