

INDEX

| | PAGE |
|--|------|
| ATTACHMENT 1KU—Unit Wheel Positioner | 49 |
| ATTACHMENT c2KU1—Twenty-inch Copy Holder | 50 |
| ATTACHMENT a3KU1—Ninety-em Attachment | 51 |
| ATTACHMENTS d5KU and e5KU1—Justifying Scale and Copy Illuminator for Standard Keyboard | 53 |
| ATTACHMENTS d6KU and e6KU1—Justifying Scale, Copy and Signal Illuminator for Duplex Keyboard | 55 |
| ATTACHMENTS b8KU and b8KU1—Unit Adding Attachment for Standard and Duplex Keyboards | 55 |
| ATTACHMENT b10KU—3-unit Minimum Justifying Space Attachment | 56 |
| ATTACHMENT 12KU—Adaptable Justifying Space Bar Attachment.. .. . | 58 |
| ATTACHMENT 14KU—Tabulating Attachment.. .. . | 58 |
| ATTACHMENT a15KU1—Justified Letter-Spacing Attachment | 61 |
| ATTACHMENTS b16KU and b16KU1—Auxiliary Signalling Attachment | 63 |
| ATTACHMENT 17KU—Tonic-Sol-Fa or 20-unit Attachment | 64 |
| ATTACHMENT a18KU1—Book Copy Holder | 66 |
| ATTACHMENT 21KU—Tabular Copy Holder | 66 |
| ATTACHMENT b22KU1—Paper Perforating Attachment | 66 |
| ATTACHMENTS a25KU and b25KU1—Electric Copy Light Attachment for Standard Keyboard | 69 |
| ATTACHMENTS a26KU and b26KU1—Electric Copy Light Attachment for Duplex Keyboard | 70 |
| ATTACHMENTS e28KU and f28KU1—Justifying Scale and Copy Illuminator for Duplex Keyboard | 70 |
| ATTACHMENT a31KU—Quadding and Centring Attachment.. .. . | 70 |
| ATTACHMENTS a32KU and a32KU1—Combined Spacing Attachment | 71 |
| ATTACHMENTS d34KU and d34KU1—Justifying Scale Illuminator Attachment for Standard Keyboard | 72 |
| ATTACHMENTS a35KU and a35KU1—Em Scale Marker Attachment 65 and 90 ems | 72 |
| ATTACHMENTS b37KU and b37KU1—Justifying Scale Illuminator Attachment for Duplex Keyboard | 72 |
| BELL—Position of the Em Rack a4KB1 | 14 |
| DETACHING AND REPLACING SUBSIDIARY PARTS | 37 |
| DRIVING CYLINDER WASHERS—To Grease | 42 |
| EM RACK—Relation of the Em Rack a4KB1 to the Driving Rack c37KB1, and meshing of the Pawl a38KB1 | 10 |
| EM RACK SLIDE Xb5KB—To Replace | 39 |
| EM SCALE—Position of the Em Scale e9KB1 | 13 |
| INTRODUCTION | 1 |
| JUSTIFYING SCALE PINION | 26 |
| JUSTIFYING SCALE, PINION AND SPRING—Position of Sleeve a11KB4 and Pinion b13KB1 | 24 |
| JUSTIFYING SCALE PINION SPRING | 26 |
| JUSTIFYING SCALE POINTER—For Keyboards equipped with Electric Light Attachment | 29 |
| JUSTIFYING SCALE POINTER—Position of Pointer g14KB1 | 27 |
| JUSTIFYING SPACE CUT-OUT—Position of the Guide Block 16KA3 | 2 |