

## INDEX

	PAGE
KEYBOARD ATTACHMENTS .. .. .	49
KEYBOARD, STANDARD—Removing and Attaching Section of a ‘Monotype’ .. .. .	30
KEYBOARD, DUPLEX—The .. .. .	48
PAPER FEED—Limit of downward stroke of Rod 9kC1, and upward stroke of Rod 9kC1 .. .. .	18
PAPER FEED LOCK—Preventing advance of Paper Ribbon .. .. .	23
PAPER FEED PAWL RING—Position of the Ring 3kC1 .. .. .	17
PAPER FEED ROD—Length of Rod 9kC1 .. .. .	21
PAPER FEED VALVE CAM—Position of Cam a12kC1 .. .. .	16
PAPER FEED WHEEL SHAFT 13kC9—To Remove .. .. .	47
PAPER FEED WHEEL SHAFT 13kC9—To Replace .. .. .	47
PAPER TOWER (Complete)—To Replace .. .. .	36
PISTON BLOCK e29kC1k—To Remove .. .. .	32
PISTON BLOCK e29kC1k—To Replace .. .. .	33
PISTON BLOCK BASE e30kC1k—To Remove .. .. .	32
PISTON BLOCK BASE e30kC1k—To Replace .. .. .	33
PISTON LEVERS 31kC1 to 31kC6 AND PISTON LEVER LINKS 31kC14— To Remove .. .. .	45
PISTON LEVERS 31kC1 to 31kC6 AND PISTON LEVER LINKS 31kC14— To Replace .. .. .	45
PISTON LEVER BRACKET—To Remove .. .. .	31
PISTON LEVER BRACKET—To Replace .. .. .	34
PUNCH BARS a33kC1, a33kC2, a33kC3—To Remove .. .. .	44
PUNCH BARS a33kC1, a33kC2, a33kC3—To Replace .. .. .	44
PUNCH BAR LEVERS 34kC1, 34kC2 and a34kC3—To Remove .. .. .	46
PUNCH BAR LEVERS 34kC1, 34kC2 and a34kC3—To Replace .. .. .	46
PUNCHES 32kC1, 32kC2—To Remove .. .. .	43
PUNCHES 32kC1, 32kC2—To Replace .. .. .	43
ROCK SHAFT FRAME—To Remove .. .. .	33
ROCK SHAFT FRAME—To Replace .. .. .	33
TENSION ARM CONNECTING ROD—Length of the Connecting Rod 38kC1 .. .. .	9
TENSION ARM PISTON ROD—Length of the Piston Rod 40kC1 .. .. .	8
UNIT RACK—To Remove and Replace .. .. .	41
UNIT RACK ABUTMENT—Position of the Abutment Bracket d27kC5 .. .. .	5
UNIT RACK SLIDE ABUTMENT—Position of the Abutment 30kC1 .. .. .	4
UNIT RACK SLIDE ECCENTRIC BUSHING—Position of the Eccentric Bushing 29kC2 .. .. .	6
UNIT RACK STOPS 31kC1 AND 31kC2—To Remove .. .. .	41
UNIT RACK STOPS 31kC1 AND 31kC2—To Replace .. .. .	42
UNIT RACK STOP GUIDE—Position of Stop Guide c33kC1 .. .. .	14
UNIT WHEEL—To Remove .. .. .	39
UNIT WHEEL—To Replace .. .. .	40
UNIT WHEEL DRIVING CYLINDERS—Position of the Cylinders a36kC1 .. .. .	2
UNIT WHEEL PAWL a38kC1—To Remove .. .. .	37
UNIT WHEEL PAWL—To Replace .. .. .	38
UNIT WHEEL PAWL ADJUSTING BAR—Position of the Adjusting Bar 39kC1 .. .. .	3
UNIT WHEEL STANDARD (Complete)—To Remove .. .. .	31
UNIT WHEEL STANDARD (Complete)—To Replace .. .. .	34
VALVE BANK PLUNGERS a41kC12—To Remove .. .. .	37