

INDEX

	PAGE
KEYBOARD ATTACHMENTS	49
KEYBOARD, STANDARD—Removing and Attaching Section of a ‘Monotype’	30
KEYBOARD, DUPLEX—The	48
PAPER FEED—Limit of downward stroke of Rod 9kC1, and upward stroke of Rod 9kC1	18
PAPER FEED LOCK—Preventing advance of Paper Ribbon	23
PAPER FEED PAWL RING—Position of the Ring 3kC1	17
PAPER FEED ROD—Length of Rod 9kC1	21
PAPER FEED VALVE CAM—Position of Cam a12kC1	16
PAPER FEED WHEEL SHAFT 13kC9—To Remove	47
PAPER FEED WHEEL SHAFT 13kC9—To Replace	47
PAPER TOWER (Complete)—To Replace	36
PISTON BLOCK e29kC1k—To Remove	32
PISTON BLOCK e29kC1k—To Replace	33
PISTON BLOCK BASE e30kC1k—To Remove	32
PISTON BLOCK BASE e30kC1k—To Replace	33
PISTON LEVERS 31kC1 to 31kC6 AND PISTON LEVER LINKS 31kC14— To Remove	45
PISTON LEVERS 31kC1 to 31kC6 AND PISTON LEVER LINKS 31kC14— To Replace	45
PISTON LEVER BRACKET—To Remove	31
PISTON LEVER BRACKET—To Replace	34
PUNCH BARS a33kC1, a33kC2, a33kC3—To Remove	44
PUNCH BARS a33kC1, a33kC2, a33kC3—To Replace	44
PUNCH BAR LEVERS 34kC1, 34kC2 and a34kC3—To Remove	46
PUNCH BAR LEVERS 34kC1, 34kC2 and a34kC3—To Replace	46
PUNCHES 32kC1, 32kC2—To Remove	43
PUNCHES 32kC1, 32kC2—To Replace	43
ROCK SHAFT FRAME—To Remove	33
ROCK SHAFT FRAME—To Replace	33
TENSION ARM CONNECTING ROD—Length of the Connecting Rod 38kC1	9
TENSION ARM PISTON ROD—Length of the Piston Rod 40kC1	8
UNIT RACK—To Remove and Replace	41
UNIT RACK ABUTMENT—Position of the Abutment Bracket d27kC5	5
UNIT RACK SLIDE ABUTMENT—Position of the Abutment 30kC1	4
UNIT RACK SLIDE ECCENTRIC BUSHING—Position of the Eccentric Bushing 29kC2	6
UNIT RACK STOPS 31kC1 AND 31kC2—To Remove	41
UNIT RACK STOPS 31kC1 AND 31kC2—To Replace	42
UNIT RACK STOP GUIDE—Position of Stop Guide c33kC1	14
UNIT WHEEL—To Remove	39
UNIT WHEEL—To Replace	40
UNIT WHEEL DRIVING CYLINDERS—Position of the Cylinders a36kC1	2
UNIT WHEEL PAWL a38kC1—To Remove	37
UNIT WHEEL PAWL—To Replace	38
UNIT WHEEL PAWL ADJUSTING BAR—Position of the Adjusting Bar 39kC1	3
UNIT WHEEL STANDARD (Complete)—To Remove	31
UNIT WHEEL STANDARD (Complete)—To Replace	34
VALVE BANK PLUNGERS a41kC12—To Remove	37